



THE AUTOMOTIVE LIGHTING BENCHMARK

JEEP JL / JT 4BANGER FOG LIGHT INSTALLATION GUIDE

WARNING: By reading this document, you agree it is only to be used as an educational guide. Morimoto Lighting nor its dealers make guarantees on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. If you are unable to clearly understand and adapt the information below, professional installation is recommended.

PACKAGE CONTENTS

2X 4BANGER NCS FOG LIGHTS



2X DEUTSCH DT TO
5202 ADAPTERS

2X MOUNTING BRACKETS
(FOR OEM STEEL BUMPER)

TOOLS REQUIRED

FOR OEM STEEL BUMPER

10MM SOCKET OR WRENCH
7MM SOCKET OR WRENCH
3MM ALLEN KEY

FOR OEM PLASTIC BUMPER


8MM SOCKET OR WRENCH
FLATHEAD SCREWDRIVER OR PICK

OEM STEEL BUMPER
INSTALL - PAGE 2


OEM PLASTIC BUMPER
INSTALL - PAGE 4

INSTALLATION PROCESS - OEM STEEL BUMPER


1. Locate and remove the two (2) 10mm screws holding the fog lights to the bumper. Unplug the connectors. Set aside.

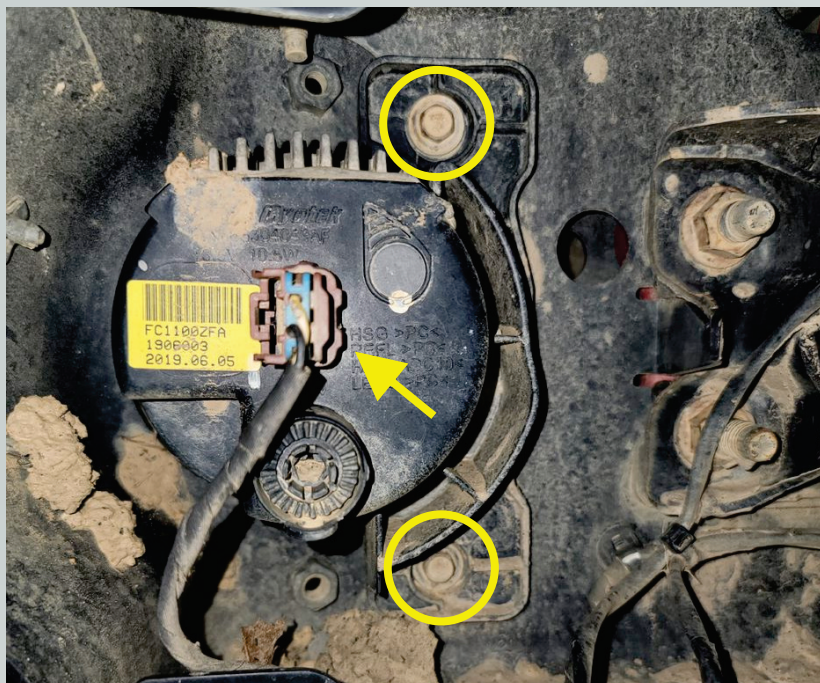

2. Fit the steel brackets to the fog lights using the provided hardware. Hand tighten.

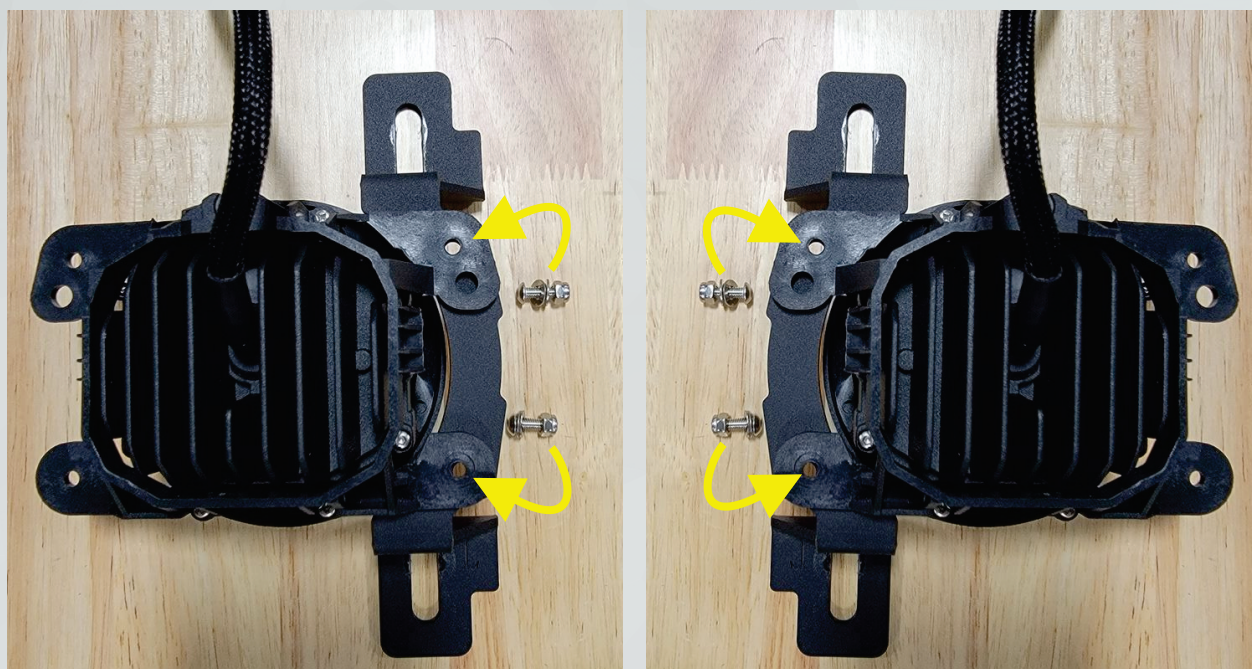

3. Connect the Deutsch DT to 5202 adapters to the factory connectors. Ensure the connector lock is engaged.

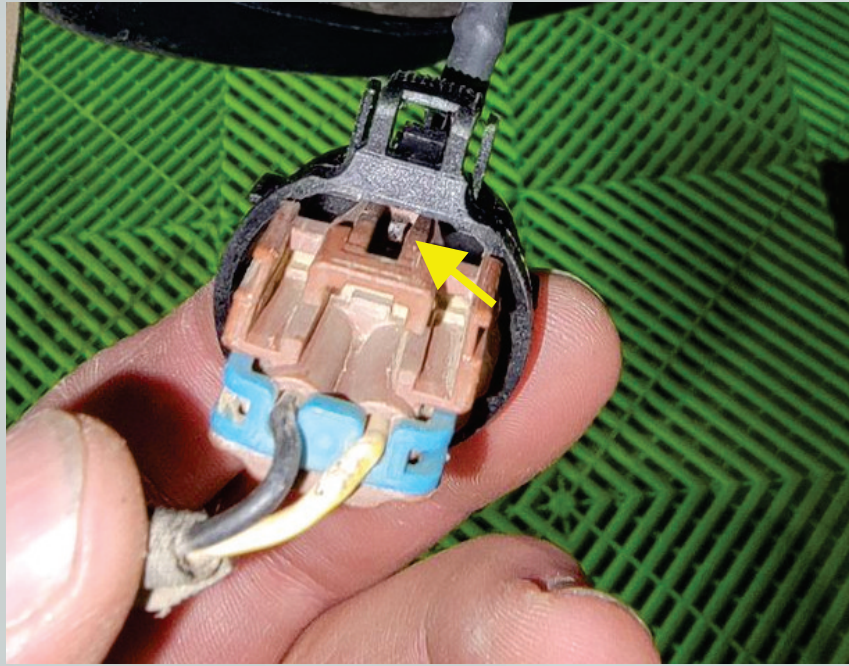

4. Install the assembled fog lights with brackets in the factory location. Reinstall the factory 10mm screws and hand tighten.

5. Turn on the fog lights to verify proper functionality.

6. Secure excess wiring with cable ties as necessary.

-END-

INSTALLATION PROCESS - OEM PLASTIC BUMPER


1. Locate and remove the eight (8) plastic body clips and two (2) 8mm bolts holding the plastic splash shield under the front bumper. Remove shield and set aside.




2. Remove the six (6) plastic clips holding the fog light cover behind each fog light. Remove and set fog light covers aside.



3. Unplug the factory connectors. Remove the four (4) 7mm bolts holding the factory fog lights to the bumper. Remove and set aside factory fog lights.

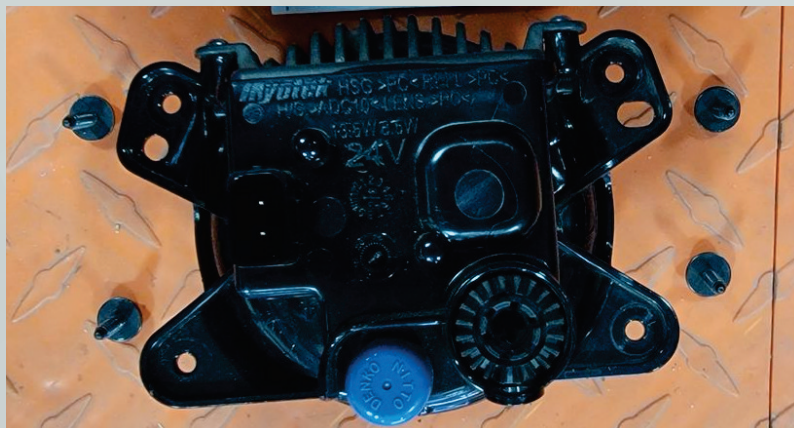

4. Connect the Deutsch DT to 5202 adapters to the factory connectors. Ensure the connector lock is engaged.

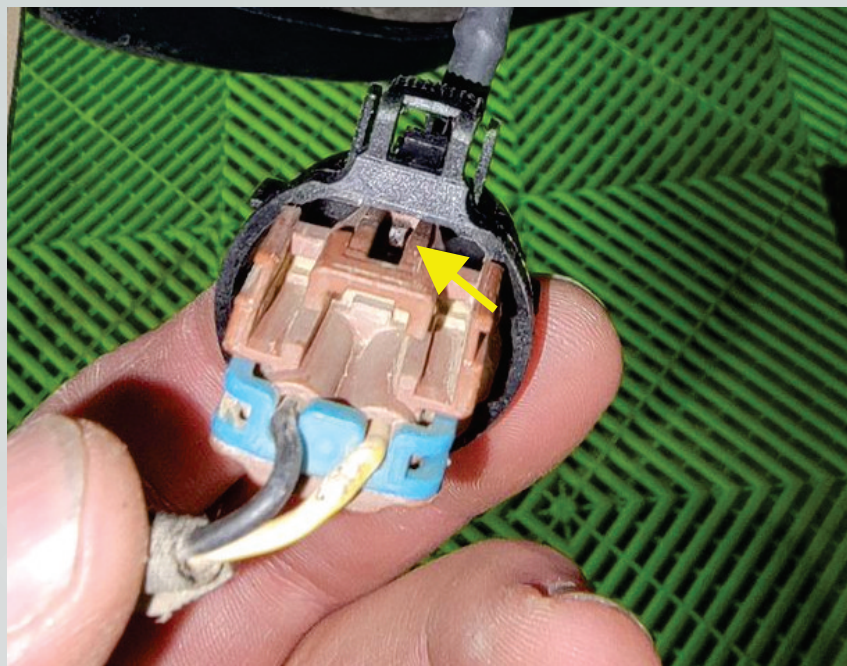

5. Install the 4Banger fog lights and reinstall the factory 7mm bolts. Hand tighten.

6. Turn on the fog lights to verify proper functionality.

7. Secure excess wiring with cable ties as necessary.

-END-