

2007-18 JEEP JK SUPER 7 HEADLIGHTS INSTALL GUIDE


WARNING: By reading this document, you agree it is only to be used as an educational guide. Morimoto Lighting nor its dealers make guarantees on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. If you are unable to clearly understand and adapt the information below, professional installation is recommended.




PACKAGE CONTENTS



2X HEADLIGHT ASSEMBLIES

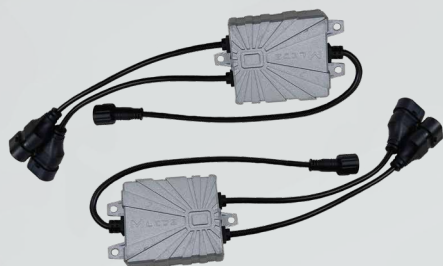

2X LED DRIVERS

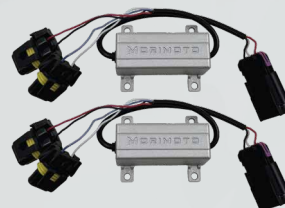

2X ANTI FLICKER
MODULES

REQUIRED TOOLS


- RATCHET
- T15 TORX BIT
- FLAT HEAD SCREWDRIVER OR TRIM REMOVAL TOOL

INSTALLATION PROCESS


1. Open your hood, and remove these six (6) push tab clips. Pull the grille forward to release it from the vehicle.




2. Unplug the turn signal socket by sliding out the red locking tab (#1), then press down the black release tab (#2) and slide the connector off. Repeat this on the other turn signal socket.

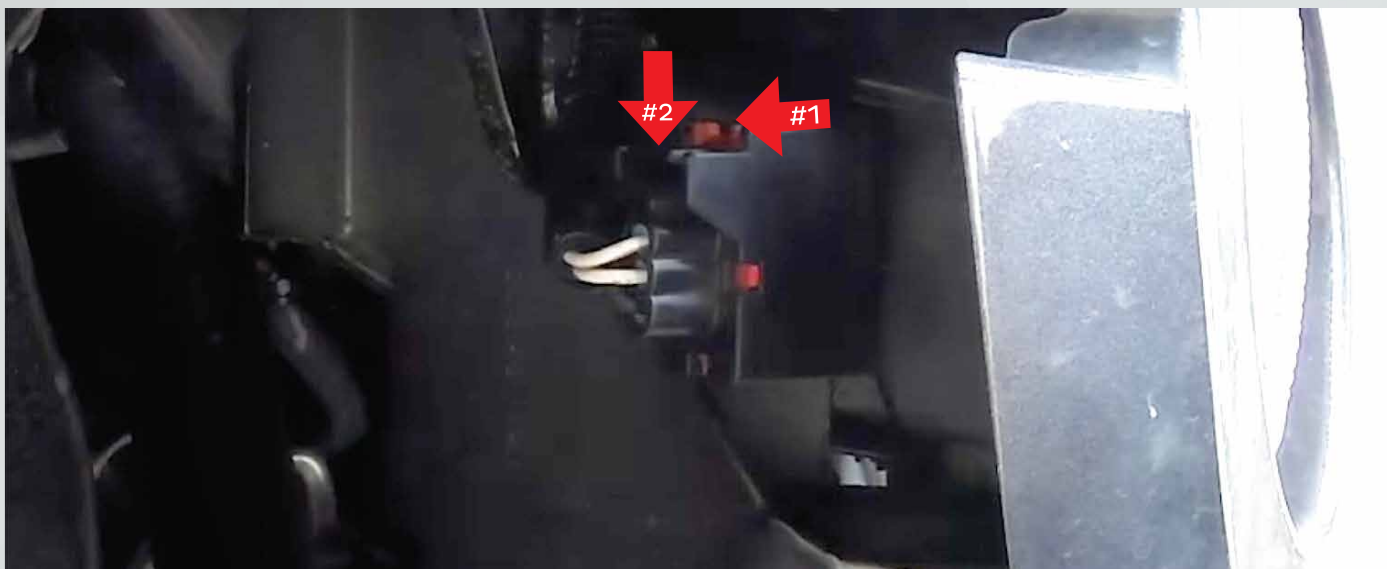

3. Remove four (4) T15 Torx screws holding in the headlight trim ring. Remove the trim ring, and pull the headlight forward. Unplug the headlight connector by sliding out the red locking tab(#1), then press down the black release tab (#2) and slide the connector off. Repeat this on the other headlight.

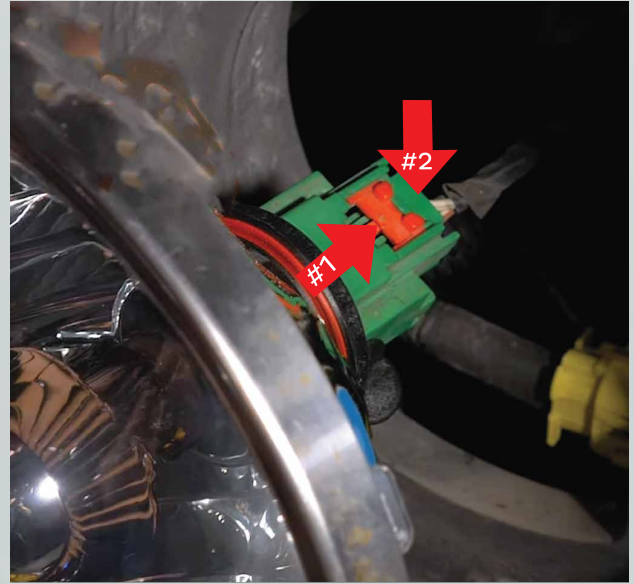


4. Get your Morimoto parts, plug in the Led Driver to the back of the Morimoto headlight. Align the arrows on the connectors, then push the two connectors together, and then thread the locking collar on.

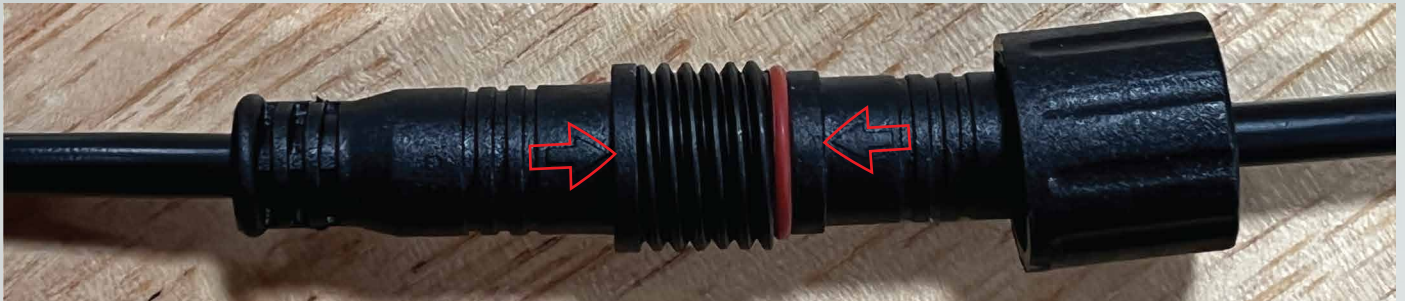

5. Plug in the Anti Flicker Module to the Led Driver.



6. Plug in the Anti Flicker Module into the vehicle connector.

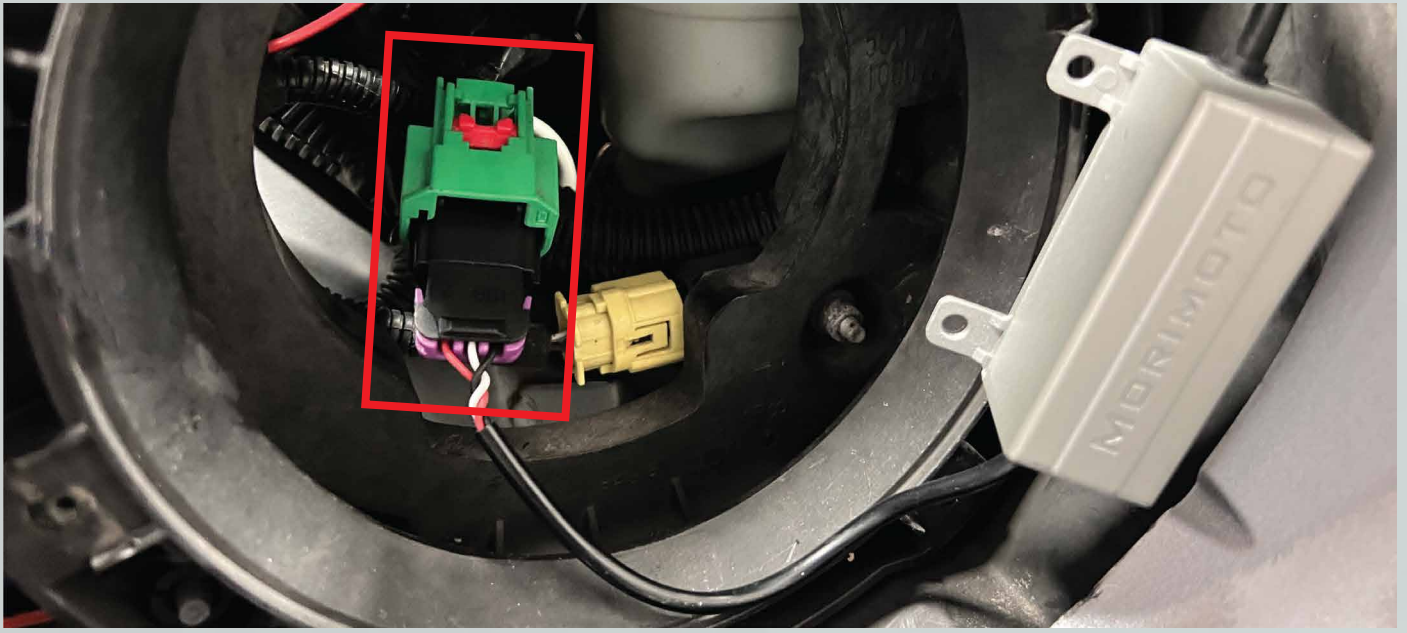

7. Place headlight into OEM bucket and install the trim ring with screw


8. Repeat step #4 - 7 on the other side of the vehicle.

9. Turn on vehicle and make sure all headlight functions work.

10. Using a T15 Torx bit, adjust the low beam height by rotating this bolt.



- Please refer to the aiming standards below when adjusting your headlight beam.

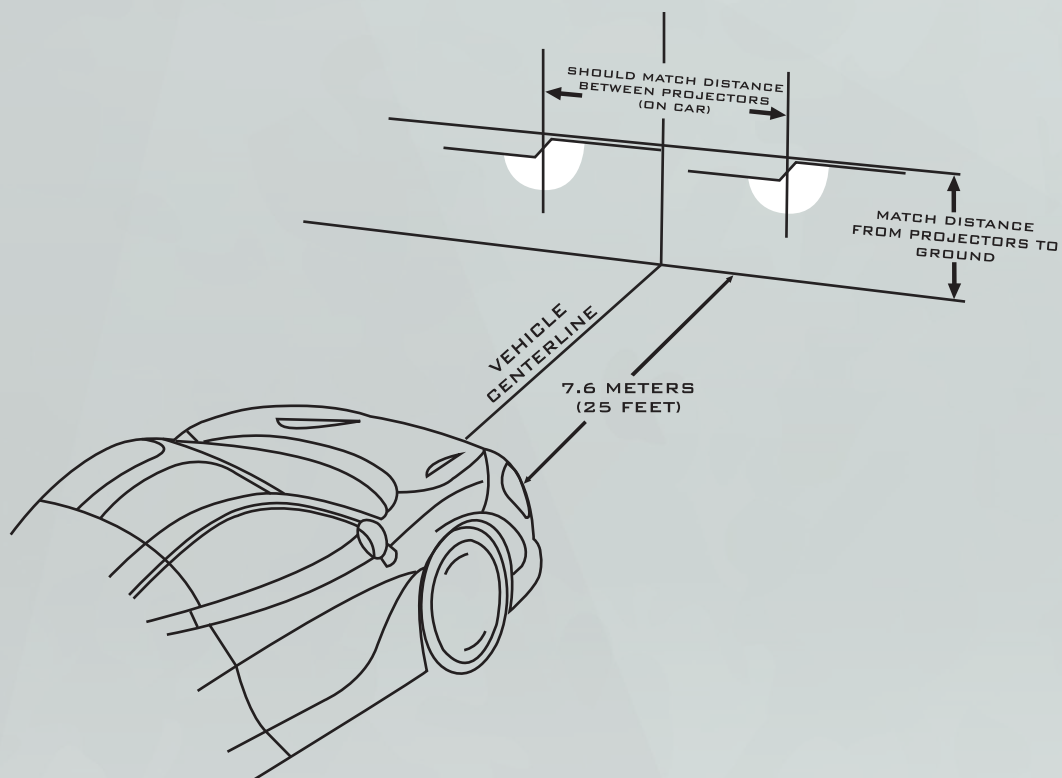

11. Reattach the front grille and reinstall the top push clips.

— ENJOY YOUR NEW MORIMOTO HEADLIGHTS! —